



GUARDIAN

HEAVY DUTY

AFTERMARKET COLLISION PARTS CATALOG



QUALITY PROTECTION AT ITS STRONGEST

1-877-337-3401

WWW.GUARDIANHEAVYDUTY.COM



HOODS	Pages 2-4
BUMPERS	Pages 5-6
GRILLES	Pages 7-8
FUEL TANKS	Pages 9-10
FUEL TANK COVERS AND SIDE FAIRINGS	Page 11
BOXES AND COVERS	Page 12
FENDER EXTENSIONS	Page 13
DAY CAB CONVERSION KITS	Page 14
FENDERS	Page 14
FUEL TANK STEPS	Page 15
AIR DEFLECTORS	Page 16
FUEL TANK COVER STEPS	Page 17
MIRRORS	Page 18
SIGNAL LIGHTS	Page 18
HEADLIGHTS	Page 19
HEADLIGHTS BEZELS	Page 20
OTHER	Page 21
CAB ROOFS	Page 21
PRODUCT WARRANTY	Page 22
PRE-INSTALL INSTRUCTIONS	Page 23



Hoods

2 year warranty on our hoods. Manufactured using 100% pure, rigid, and flexible fiberglass.

VOLVO



VNL 3rd Gen
Code: V117-003
Length: 52.5"
Year: 2002 and UP



VNL 610, 2nd Gen
Code: V117-002
Length: 55.75"
Fender Well: 27" opening, 7" drop
Year: 1998 and UP



VNL 660, Severe Duty
Code: V117-001
Length: 55.75"
Model: "Severe Duty"
Fender Well: 29" opening
Year: 1998 to 2002.5



WIA
Code: V117-004
Length: 55"
Year: 1986 and UP

H
O
O
D
S

FREIGHTLINER



Century
Code: 41" hinges: F117-003A
6" hinges: F117-003B
Length: 55"
Year: 1996 and UP
Notes: Style w/ non-overlay grille



Century, Overlay Grille
Code: 6" hinges: F117-003C
Length: 55"
Year: 2004 and up
Notes: Style w/ overlay grille



FLD-112
Code: F117-006
Length: 52.25"
Year: 1987 and UP
Notes: Crossmember Included



FLD-120
Code: F117-001
Length: 60.5"
Year: 1989 and UP



Columbia
Codes: Older Style: F117-005A,
Newer Style w/Filter @ Center: F117-005B
Length: 56.5"
Year: 2001 and UP



FL Series
Code: F117-002
Brand: Freightliner
Model: FL50-80
Length: 46.5"
Year: 1991 and UP



FL-106 Series
Code: F117-004
Year: 1991 and UP



M2-106, with bezels
Codes: Without apron: F117-007B;
With apron: F117-007C
Notes: Older style without bezels unavailable

KENWORTH

NO
PHOTO

Cascadia
Code: F117-008
Length: 50"
Year: 2008 and UP



T-2000, Older
Code: K117-004A: No Spoilers and Bumper; K117-004B: w/ Bumper and Spoilers
Year: 2004 and Older
Notes: For bumper and air dams separately, see Bumpers

NO
PHOTO

T-2000, Newer
Code: K117-004C:
w/ Bumper and Spoilers
Year: 2005 and newer
Notes: For bumper and air dams separately, see Bumpers



T-600 Aero
Code: K117-003
Length: 59"
Year: 1996 and UP
Notes: 1 pc. direct replacement, need hinges to replace 3 pc.



T-660
Code: K117-006
Year: 2008 and UP



T-800A
Code: K117-002A
Length: 64"
Year: 1987 and UP



T-800B, Non-Plastic
Code: K117-002B Non-Plastic Replacement
Length: 60.5"
Year: 1996 and UP
Notes: Will fit plastic hood w/ relocation of rear hood locators.



T-800B, Plastic
Code: K117-002BP
Length: 61.5"
Year: 2008 and up
Notes: CWS Plastic replacement. Fits 120" BBC only, not 112"



T-800B, Cut Fenders
Code: K117-002C Non-Plastic Replacement; K117-002CP, Plastic Replacement
Length: 60.5"
Notes: Cut fenders, CWS, fits 120" only



T-300
Code: K117-005
Length: 43"
Year: 1994 to 2009
Notes: Style with sealed beam headlights



W-900L
Code: K117-001B
Length: 66"
Year: 1994 and UP
Notes: CWS (Older), will NOT replace "plastic" OE hood application



W-900L, Plastic OE Replace
Code: K117-001BP
Length: 66"
Year: 1994 and UP
Notes: CWS (newer version), Plastic OE replacement, dual breather cutouts

GM



Topkick
Code: G117-002
Length: 42.25"
Year: 1995-2002
Notes: Confirm style. Older model (G117-001) also ran to '02



Topkick/Kodiak
Code: G117-001
Length: 37.5"
Year: 1990-2002
Notes: Confirm style. Newer model (G117-002) also ran to '02

INTERNATIONAL



4700/4900
Code: I117-004A
Length: 44.5"
Year: 1989 and UP



8100/4700LP/4900LP
Code: I117-003
Length: 39.75"
Year: 1989 and UP



8200/8300
Code: I117-005
Length: 54"
Year: 1989 to 2001



9200
Code: I117-001A
Length: 59.5"
Year: 97-99



9200i
Code: I117-001B
Length: 54"
Year: 99 and up
Notes: CWS



9400i
Code: I117-002A
Length: 65.5"
Year: 1997 and UP
Notes: FWS



9400
Code: I117-002B
Length: 70.5"
Year: 1987 and UP
Notes: FWS



9400i, CWS
Code: I117-002C
Length: 60"
Year: 1999 and UP
Notes: CWS



9900i
Codes: No cutouts: I117-007A
1 RH cutout: I117-007B
2 cutouts: I117-007C
Length: 67"
Notes: CWS



9900i, Short
Codes: No cutouts: I117-008A
1 cutout (RH): I117-008B
2 cutouts: I117-008C
Length: 56.75"
Year: 1999 and up, CWS



2500
Code: I117-006
Length: 52.5"
Year: 1978 and up
Notes: Single RH Breather



Arrow 4900
Code: I117-004B
Model: ARROW 490
Specialty Design for
International 4900
Length: 44.5"
Year: 1989 and UP



4300/4400
Codes: Older (09 and down): I117-009A
Newer (10 and up): I117-009B
Length: 41"



Prostar, Newer style
Code: I117-010
Length: 57.25"
Year: 2008 and UP

PETERBILT



**Peterbilt 379
Extended, 3 Pc**
Code: P117-001
Length: 64"
Notes: w/o grille, grille
priced separate. All
fiberglass.

FORD



Ford F-series
Codes: E117-001
Length: 39.5"
Models: FORD F-600,
700, 800
Year: 1994 and 1999
Notes: Not including grille
(E104-001)



Bumpers

High quality aftermarket bumpers using 100% pre, rigid, and flexible fiberglass, as well as quality chrome steel.

VOLVO



VNL 3rd Generation
Code: V105-003
Material: 1 Piece, Fiberglass
Year: 2002 and UP



VNL 660, 610
Code: V105-001
Material: Fiberglass
Year: 1998 and UP

INTERNATIONAL



4900
Code: I105-003
Material: Chrome, Steel
Year: 89-02



9200/9400/9200i/9400i
Code: Bumper only: I105-002
Material: 1 Piece, Chrome Steel
Year: 1998 and UP



8100, Ends
Codes: LH: I105-105
RH: I105-205
Material: Fiberglass
Year: 1998 and UP



9400 IHC
Code: I105-001
Material: Chrome
Year: 1996 and Older
Notes: Flat bumper



Prostar, Newer, 3pc
Codes: Complete: I105-006B;
Pieces: LH: I105-106B,
RH: I105-206B,
Center: I105-306B
Material: Fiberglass, 3pc's
Year: 2012 and UP



Prostar, Older, 2pc
Code: LH: I105-106A and
RH: I105-206A
Material: Fiberglass, 2pc's
Year: 2008 and up
(about 2012)

FREIGHTLINER



Century
Codes: Complete:
F105-002
Center: F105-302
LH: F105-102;
RH: F105-202
Material: Fiberglass, 3 pc.
Year: 1989 and UP



Columbia
Codes: Complete:
F105-003
Center: F105-303
LH: F105-103;
RH: F105-203
Material: Steel Center,
Fiberglass Ends



M2, Ends Only
Codes: Left: F105-104
Right: F105-204
Material: Fiberglass,
Ends only
Year: 1989 and UP



FLD-120,112
Fiberglass: F105-001A
Chrome: F105-001B
Year: 1989 and UP



Cascadia
Code: F105-005
Material: Fiberglass
Year: 2007 - 2017

KENWORTH



T-600, Fiberglass
Code: K105-003
Year: 1997 and UP



T-600, Chrome
Code: K105-001E
Notes: Aero Type



T-800, 1 pc, Fiberglass
Code: K105-001A
Year: 1997 and UP



T-800, 1 pc, Chrome
Code: K105-001D
Year: 1997 and UP
Notes: Aero type



T-800, 3 pc, '07 and under
Code: Plain, complete: K105-001B
Center: K105-301B, RH: K105-201B,
LH: K105-101B; w/Headlight Holes;
Complete: K105-001C, RH: K105-201C;
LH: K105-101C
Material: 2 fiberglass
ends, 1 Alum center
Year: '07 and Older



T-800, 3 pc, '08 and up
Code: Complete: K105-005A
Center pc: K105-305A
RH piece: K105-205A
LH Piece: K105-105A
Material: 2 fiberglass
ends, 1 Aluminum center
Notes: with Headlight Holes
Year: 2008 and up



T-800, 3 pc, '12 and up
Code: Complete: K105-005B
RH piece: K105-205B
LH Piece: K105-105B
Material: 2 fiberglass
ends, 1 Aluminum center
Notes: with Headlight Holes
Year: 2012 and up



T-300, 3 pc.
Code: Complete:
K105-004A
Center pc: K105-304A
RH piece: K105-204A
LH Piece: K105-104A
Material: 2 fiberglass
ends, 1 Steel center



T-660, 2 pc.
Code: RH: K105-206
LH: K105-106
Material: Fiberglass



T-2000, Older
Code: K105-002A
(1 pc, Bumper only!), Lower air
dam, LH: K105-102A,
RH: K105-202A
Material: Fiberglass
Year: 2004 and Older
Notes: Air dams on '05 and up
work only for 2 pc. dams
(not 3 pc. dams)




T-2000, Newer
Code: K105-002B (1 pc,
Bumper only!), Lower air
dam: LH: K105-102B,
Center: K105-302B,
RH: K105-202B
Material: Fiberglass
Year: 2005 and newer
Notes: Air dams on '05 and up work
only for 2 pc. dams (not 3 pc. dams)



T-680, 2pc Fiberglass
Code: LH: K105-107
RH: K105-207
Material: Fiberglass



**Kenworth T-800,
1pc, chrome**
Code: K105-001F
Year: 2006 and UP
Notes: Aero type

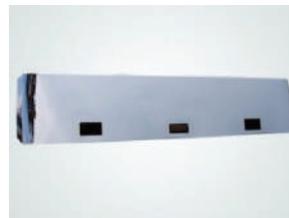

Chrome Steel
Code: 21": U105-001
Brand: Universal bumper
Width: 21", 19", 16"
19": U105-002; 16": U105-004



KW/Pete/Int'l
Code: U105-003
Material: Chrome
Width: 16"
Notes: Rectangular, Step hole

PETERBILT




386, Fiberglass
Code: P105-002
Material: Fiberglass




Grilles
Fabricated in Aluminium and Stainless Steel.


VOLVO

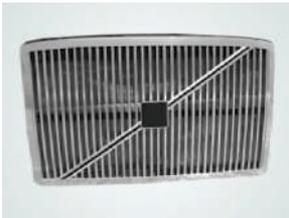

VNL, 2nd Gen
Code: V104-001A
Material: Aluminum
Year: 1986 and UP

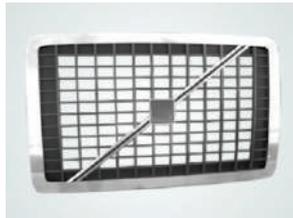

VNL, 3rd Gen
Code: V104-001B
Material: Aluminum
Year: 2002 and UP

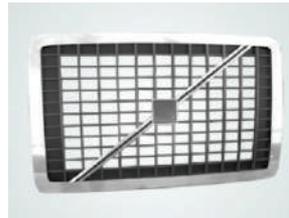


VNM, Complete
Code: V104-001C
Material: Aluminum



WIA
Code: V104-002
Material: Stainless Steel
Year: 1986 and UP

KENWORTH

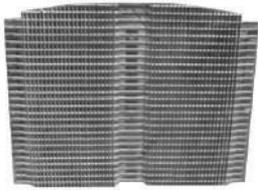


**T-600, Non-Diamond/
Mesh Type**
Code: K104-004A
Model: T-600B, T-600
AERO (split grille)
Material: Aluminum
Painted
Year: 1990 and UP



T-600, Mesh/Diamond Type
Code: K104-004B
Model: T600 aero (split grille)
Material: Aluminum Mesh
Year: 1990 and UP



W900L
Codes: Complete,
Surround and grille:
K104-001A
Grille only: K104-001B
Material: SURROUND:
Stainless steel;
GRILLE: Aluminum

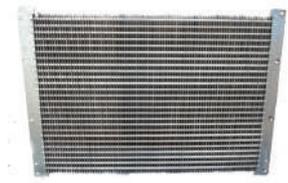

T800
Code: Complete,
Surround and
grille: K104-002A
Grille only: K104-002B
Material: SURROUND:
Stainless steel
GRILLE: Aluminum



T2000
Code: K104-003
Material: Aluminum
Notes: Grille only



T300
Code: K104-005
Material: Aluminum
Notes: Grille only




T660
Code: K104-006
Material: Aluminum
Notes: Grille only



T680
Code: K104-007
Material: Aluminum
Notes: Grille only

FREIGHTLINER

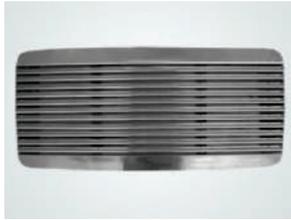

Century
Code: F104-003
Material: Aluminum
Year: 1996 to 2005
(non-overlay)



FL Series
Code: F104-002
Model: FL50-90
Material: Aluminum
Year: 1991 and up



M2
Code: F104-005
Material: Aluminum
Notes: Not pre-drilled



FLD-112
Code: F104-004
Material: Aluminum
Year: 1989 and up



FLD-120
Code: F104-001
Material: Aluminum
Year: 1989 and UP



XL Classic
Code: F104-006
Material: Aluminum



**Columbia, Overlay
Style (Newer)**
Code: F104-007
Material: Plastic, Chrome

INTERNATIONAL



9200/9400
Code: I104-001
Model: 9200, 9400, 9200i, 9400i
Material: Ptd. Steel with
Alum. bars, w/ center notch
for emblem
Year: 1994 and UP



9200/9400, Older
Code: I104-002
Model: 9200, 9400
Material: Stainless Steel
Year: 1987 and UP

FORD



Ford F-ser, F600 to F800
Code: E104-001
Material: Fiberglass
Year: 1994*-1999: F800 only,
works for all F-ser models
after 1994

PETERBILT



Peterbilt 379 Extended
Code: P104-001
Material: Stainless Steel



Fuel Tanks
Front fill unless otherwise noted.
All tanks are made of aluminum.

INTERNATIONAL



9000 series, 99 and up
46" Code: Right: I197-202C
Left: I197-102C
70" Code: Right: I197-202A
Left: I197-102A
Length: 46" & 70"
Diameter: 26"
Year: 99 and up



9400 IHC, 98 and down
Code: Right: I197-201
Left: I197-101
Length: 70"
Diameter: 26"
Year: 98 and down



Prostar, 26" Diameter
69" Right: I197-203A
60" Left: 197-103B
45, L & R:
Right: I197-203C
Left: I197-103C
Fill: REAR



4200/4300 4400
Code: Right: I197-204A
Left: I197-104A
Dimensions: 16" x 25" x 36"
Notes: D-tank



7400/7600
Code: Right: I197-205A
Left: I197-105A
Dimensions: 19" x 25" x 36"
Notes: D-tank

KENWORTH



36" & 48"
36" Code: Right: K197-201A
Left: K197-101A
48" Code: Right: K197-201B
Left: K197-101B
Length: 36" and 48"
Diameter: 24"



60" & 72"
60" Code: Right: K197-201C
Left: K197-101C
72" Code: Right: K197-201D
Left: K197-101D
Length: 60" and 72"
Diameter: 24"
Year: Unknown



T600 Only
36" Code: Right: K197-202A
Left: K197-102A
48" Code: Right: K197-202B
Left: K197-102B
60" Code: Right: K197-202C
Left: K197-102C (**REAR FILL**)
72" Code: Right: K197-202D
Left: K197-102D (**REAR FILL**)
Fill: REAR
Length: 36", 48", 60", 72"
Diameter: 24"



T660 Only

Codes: Left: K197-104A
Right: K197-204A
Fill: REAR
Length: 72"
Diameter: 24"



T300 Only

36" Codes: Left: K197-103A
Right: K197-203A
60" Codes: Left: K197-103B
Right: K197-203B
Length: 36" and 60"
Diameter: 22"

FREIGHTLINER



M2

Code: Left: F197-101A
Right: F197-201A
Fill: REAR
Dimensions: 19"x19"x37"W



Century/ Columbia

86" Code: Left: F197-102A | Right: F197-202A
82" Code: Left: F197-102B | Right: F197-202B
72" Code: Left: F197-102C | Right: F197-202C
60" Code: Left: F197-102D | Right: F197-202D
Lengths: 86", 82", 72", 60"
Diameter: 23"



FLD

84" Code: Left: F197-103A
Right: F197-203A
60" Code: Left: F197-103B
Right: F197-203B
Lengths: 60", 84"
Diameter: 23"

VOLVO



VOLVO VNL

46" Code: Right: V197-201C
Left: V197-101C
55" Code: Right: V197-201B
Left: V197-101B
68" Code: Right: V197-201A
Left: V197-101A
Length: 46, 55" & 68"
Diameter: 26"

PETERBILT



Peterbilt

54" Code: P197-301D,
works for both sides (**CENTER FILL**)
60" Code: Right: P197-201A
Left: P197-101A
65" Code: Right: P197-201B
Left: P197-101B
72" Code: Right: P197-201C
Left: P197-101C
Length: 54", 60", 65" and 72"
Diameter: 26"



Fuel Tanks Covers / Side Fairings

KENWORTH



T-600 Aero, Front
Code: Right: K164-201A
and Left: K164-101A




T-600 Aero, Center
Code: Right: K164-201AM31,
36, or 41
Left: K164-101AM31,
36, or 41
Notes: 31, 36, 41 signifies
measurement hole to hole
on fairing



T-600 Aero, Rear
Code: Right: K164-201AR
and Left: K164-101AR



T-600 Non-Aero, Lower
Code: Right: K164-202L
and Left: K164-102L
Model: T-600 A, B, II,
Non-Aero

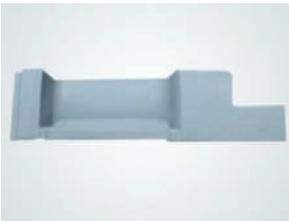

T-600 Non-Aero, Upper
Code: Right: K164-202U
and Left: K164-102U
Model: T-600 A, B, II,
Non-Aero



T-660, Front
Code: Style with Ext'n:
LH: K164-103A, RH: K164-203A
Style without Ext'n: LH: K164-103B,
RH: K164-203B

FREIGHTLINER



Columbia/Century, Front
Code: Right: F164-201 and
Left: F164-101



Battery Boxes and Covers

FREIGHTLINER



FLD/Classic

2 steps, 31"W x 16" Deep: F607-001B

2 steps, 24"W x 16" Deep: F607-002B

2 steps, 16"W x 24" Deep: F607-003B

Plain, 16"W x 24" Deep: F607-003A

Material: Aluminum



Columbia/Century

Plain, 31"W x 16" Deep: F607-001A

Plain, 24"W x 16" Deep: F607-002A

Plain, 31"W x 24" Deep: F607-004A

2 steps, 31"W x 24" Deep: F607-004B

Material: Aluminum

KENWORTH



T-800 & W-900, One Step

Codes: 34": K198-004B;

40": K198-003

Material: Aluminum



W-900, 45"

Code: Left: K198-101B

Right: K198-201B

Material: Aluminum

INTERNATIONAL



9200i, 9400i

Code: I607-001A

Dimensions: 18" x 28"

Notes: Including hardware, no steps



Fender Extensions

INTERNATIONAL



9200 & 9400
Code: Left: I111-104
 Right: I111-204
Year: 1997 and up
Notes: For 9200/9200i,
 9400/9400i



4700/4900 (non-LP)
Code: Left: I111-102
 Right: I111-202
Year: 1990 to 2002
Notes: NOT for lo pro.
 For lo pro: see I111-105,
 I111-205



8100/4700LP/4900LP
Code: Left: I111-105
 Right: I111-205
Year: 1990 to 2002
Notes: Works on
 4700/4900 Lo Pro's

8300
Code: Left: I111-103
 Right: I111-203

9400
Code: Left: I111-101
 Right: I111-201
Year: 96 and older

FREIGHTLINER



FLD120
Code: Left: F111-101
 Right: F111-201



Columbia/Century
Code: Left: F111-103
 Right: F111-203



FL50-90 Ser
Code: Left: F111-102
 Right: F111-202

KENWORTH



T800B
Code: Left: K111-101
 Right: K111-201
Notes: Cut fenders/Curved windshield



Day Cab Conversion Kits

KENWORTH



Various Models

Code: K199-001

Model: T600, T800B, W900L - Aerocabs Only

Year: ALL

Description: This is the Complete Conversion Kit including interior upholstery, glass, bracketry and exterior cover. Not inc rivets.



Fenders

PETERBILT



379 Extended

Code: P110-201 and P110-101

Material: Fiberglass

Year: 1997 and up

INTERNATIONAL



4300, Filler Behind Headlight

Code: LH: I110-101; RH: I110-201

Material: Fiberglass

GMC



Topkick, Bolt-on

Code: LH: G110-101; RH: G110-201

Year: 1990-2002

Notes: For style with bolt-on fenders only



Fuel Tank Steps

All fuel tank steps are made of aluminum.

FREIGHTLINER



FLD, 71"

Code: F199-001

Length: 71 "



FLD, Complete


Code: F199-002



Columbia, 60"

Code: F199-003

KENWORTH

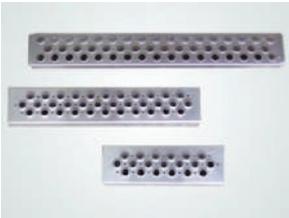

36", 48", 60"

Code: 36": K199-002

48": K199-003

60": K199-004

Lengths: 36", 48", 60"

INTERNATIONAL



9200I, 9400I

Code: 45": I199-001

63": I199-002

72": I199-003

Lengths: 45", 63", 72"



Air Deflectors

KENWORTH



T-800, T-600
Code: K166-001
Pieces: 5



T800, T600, T660
Code: K166-002
Notes: Aerocab Sleeper,
62" length, 1 piece


OTHER



Freightliner FLD-120
Code: F166-001
Notes: 4 piece



International 9200, 9400
Code: I166-001
Pieces: 1

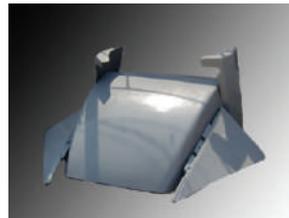

Volvo VNL
Code: V166-001
Pieces: 5



Fuel Tank Cover Steps

All fuel tank cover steps are made of aluminum.

KENWORTH



T-600 Aero, Lower
Code: K165-001C
Model: T-600 Aero
 Lower, Front



T-600 Aero, Rear
Code: K165-001D



T-600 Aero, Upper
Code, without plug holes: Left: K165-101B
 Right: K165-201B
Code, with plug holes:
 Left: 165-101A
 Right: K165-201A



T-600, Lower
Code: K165-002B
Model: T-600; A, B, II,
 Non-Aero



T-600, Upper
Code: Right: K165-202A
 and Left: K165-102A
Model: T-600; A, B, II,
 Non-Aero



T-660, Front (Long)
Code: K165-003L, fits
 both sides



**Kenworth T-660,
 Rear (Short)**
Code: K165-003S, fits
 both sides



Mirrors

KENWORTH



T800B, T600, T660

Code: RH: K128-201, LH: K128-101

Notes: Electric, defrost, black, complete

FREIGHTLINER



Cascadia

Code: RH: F128-201, LH: F128-101

Notes: Electric, defrost, black, complete

INTERNATIONAL



9200i/9400i

Code: RH: I128-201, LH: I128-101

Notes: Electric, defrost, black, complete



Signal Lights

KENWORTH



T600, T300

Code: RH: K145-201, LH: K145-101

FREIGHTLINER



FLD-120

Code: RH: F145-201, LH: F145-101

VOLVO



VNL, 96-03

Code: RH: V145-201, LH: V145-101



Headlights

KENWORTH



T800, T600, W900L

Code: RH: K114-201,
LH: K114-101

Notes: Complete w/
chrome bezel and lights.
Also works for Freightliner
FLC and 379 Pete



T660

Code: RH: K114-202,
LH: K114-102

Notes: Not including bulb

FREIGHTLINER



FLD120

Lights and Signal:

RH: F114-201

LH: F114-101

Lights, no bezel or

signal: RH: F114-202

LH: F114-102

INTERNATIONAL



9200i/9400i

Code: RH: I114-201,
LH: I114-101

Notes: Complete w/
chrome bezel and signal



Headlights Bezels

KENWORTH



T800, T600, W900L

Code: Both sides:
K144-001

Notes: Bezel only. Also works for Freightliner FLC and 379 Pete

FREIGHTLINER



FLD-120

Code: RH: F144-201,
LH: F144-101

Notes: Chrome bezel only



Columbia

Code: RH: F144-202
LH: F144-102

Notes: Chrome bezel only



Other



Crossmembers
International 8300:
 I500-001
International 9200/9400, Non "i": I500-002
International 9900i:
 I500-004
International 9200i/9400i:
 I500-003
Freightliner FLD-120:
 F500-001
Freightliner Century, 6":
 Insert grille: F500-002B
 Overlay grille: F500-002C
Freightliner Century, 41":
 F500-002A
Freightliner Columbia:
 F500-003



Mud Flap Brackets
Code: U990-001A
Material: Chrome Steel
Notes: 2 Pieces
 (1 Right 1 Left),
 Spring loaded



Mud Flap Brackets With Lights
Code: U990-002
Material: Chrome Steel
Notes: 2 Pieces
 (1 Right 1 Left),
 Spring loaded



Drop Visors
Freightliner FLD120:
 F164-001
Kenworth T600:
 K164-001
Kenworth T800:
 K164-002



Cab Roof



Kenworth, Various Models
Code: K166-001B
Notes: T300, T370, T600,
 T800B, T600, CWS, for sleeper cabs



Product Warranty

Pricing: Prices subject to change without notice.

Ordering: A written or electronic order may be required when delivery or freight is involved. Truckload orders can be sent to info@guardianheavyduty.com. Order forms are available through Guardian.

The customer is solely responsible for 1) proper vehicle/product identification, 2) complete and correct orders. Any requests for changes on orders may be declined, depending on timeliness and product availability.

Warranties: Limited warranty against manufacturing defects and inner structure failure. The length of this warranty is for 2 years, and is limited to and not to exceed cost of defective product, and *applies to hoods only*.

Freight Policy: LTL shipments are F.O.B Hudson, CO 80642 unless other arrangements have been made with Guardian. Truckload shipments are F.O.B. Guardian's supplier(s) location.

Damaged Goods: Every effort is made to ensure your order is properly packaged. If, upon receipt, an item is missing or damaged, every effort should be made to contact a Guardian representative immediately.

It is the responsibility of the carrier to deliver the merchandise in good condition. If you receive an opened or damaged package/crate, inspect the contents before signing for them. If the item is damaged and you can repair it, write "DAMAGED", as well as any related notes, on the delivery sheet and sign for it, then call Guardian in either case. Do not reject the shipment, or you may incur fees by doing so. Inspect product thoroughly – all product signed for, without "damaged" marked on the bill of lading becomes the customers' responsibility. If damage is not noticed until merchandise is signed for and unpacked, notify Guardian immediately by phone. Guardian will likely require photos to be sent for each damaged product.

Guardian ultimately claims no responsibility for products damaged in transit.

Returned Goods: Guardian must be notified prior to a return. Customer must disclose condition and reason for return in order for Guardian to approve a return request. Returned goods will be subject to a restocking fee of 25%. Depending upon the condition of crating/packaging there may be a charge to repackage the goods. If the returned items have been improperly repackaged and damage has resulted, reduced or no credit may be given. Cost of return shipping is the responsibility of the customer. Painted hoods are not returnable! Confirm fit before painting. All returns are at the discretion of Guardian Heavy Duty, LLC. No returns will be considered after 14 days of the customer's original date of receipt. Truckload orders are non-returnable orders.



Warranty Compliant Pre-install Instructions

1. Prior to painting, please ensure this is the correct part by: a) testing the fit of this part on your truck, and b) testing the fit of your lights, grille and all accessories.
2. Wash the hood with a mixture of mild soap or dishwashing liquid and water using a soft sponge. Rinse with clear water. Use mineral spirits to remove surface stains.
3. Clean the surface using any solvent to remove mold release agents, wax, dirt, and other greasy agents.
4. Sand the hood surface lightly using 400-600 grit wet sand paper. This step will help guarantee adherence of the primer and top coat.
5. Clean the hood with clear water, and then apply paint thinner to remove all dirt and grease from the surface.
6. Apply the fiberglass primer of your preference to the surface and cover the entire area. Make sure the primer is suggested for use with the top coat paint you plan to use.
7. If necessary, sand and clean again before painting.