



GUARDIAN

HEAVY DUTY

AFTERMARKET COLLISION PARTS CATALOG



QUALITY PROTECTION AT ITS STRONGEST

1-877-337-3401

www.GUARDIANHeavyDuty.com

HOODS	Pages 2-4
BUMPERS	Pages 5-6
GRILLES	Pages 7-8
FUEL TANKS	Pages 9-10
FUEL TANK COVERS AND SIDE FAIRINGS	Page 11
BATTERY BOX COVERS	Page 12
FENDER EXTENSIONS	Page 13
DAY CAB CONVERSION KITS	Page 14
FENDERS	Page 14
FUEL TANK STEPS	Page 15
AIR DEFLECTORS	Page 16
FUEL TANK COVER STEPS	Page 17
LUXURY STEPS	Page 18
OTHER	Page 19
CAB ROOF	Page 19
MIRRORS	Page 20
SIGNAL LIGHTS	Page 20
HEADLIGHTS	Page 21
HEADLIGHTS BEZELS	Page 21



Our hoods boast the longest warranty in the industry. These hoods are manufactured using 100% pure, rigid and flexible fiberglass.

VOLVO



VNL 3rd Gen
Length: 52.5"
Code: V117-003
Year: 2002 and UP



VNL 610, 2nd Gen
Length: 55.75"
Code: V117-002
Fender Well: 27" opening, 7" drop
Year: 1998 and UP



VNL 660, Severe Duty
Model: "Severe Duty"
Length: 55.75"
Fender Well: 29" opening
Code: V117-001
Year: 1998 to 2002.5



WIA
Length: 55"
Code: V117-004
Year: 1986 and UP

FREIGHTLINER



Century
Length: 55"
Code: 41" hinges: F117-003A
6" hinges: F117-003B
Year: 1996 and UP
Notes: Style w/ non-overlay grille



Century, Overlay Grille
Length: 55"
Code: 6" hinges: F117-003C
Year: 2004 and up
Notes: Style w/ overlay grille



FLD-112
Length: 52.25"
Code: F117-006
Year: 1987 and UP
Notes: Crossmember Included



FLD-120
Length: 60.5"
Code: F117-001
Year: 1989 and UP



Columbia
Length: 56.5"
Code: F117-005
Year: 2001 and UP



FL Series
Brand: Freightliner
Model: FL50-80
Length: 46.5"
Code: F117-002
Year: 1991 and UP



FL-106 Series
Code: F117-004
Year: 1991 and UP



M2-106
Length: 39"
Code: F117-007
Notes: Has option for bezel notches to be cut. No Apron. Call for availability if apron needed (not included). Aprons can be glued on to this version

KENWORTH



T-2000, Older

Code: K117-004A: No Spoilers and Bumper; K117-004B: w/ Bumper and Spoilers
Year: 2004 and Older
Notes: Bumper: K105-002A; Lower Air dams, LH: K105-102A, RH: K105-202A.



T-2000, Newer

Code: K117-004C: w/ Bumper and Spoilers
Year: 2005 and newer
Notes: Bumper: K105-002B; Lower Air dams, LH: K105-102B, CENTER: K105-302B, RH: K105-202B.



T-600 Aero

Length: 59"
Code: K117-003
Year: 1996 and UP



T-660

Code: K117-006
Year: 2010 and UP



T-800A

Length: 64"
Code: K117-002A
Year: 1987 and UP



T-800B

Length: 60.5"
Code: K117-002B
Year: 1996 and UP



T-800B

Code: K117-002C
Notes: Cut fenders, CWS



T-800B, 61.5"

Length: 61.5"
Code: K117-002CP
Year: 2008 and up
Notes: CWS. Will fit plastic hood w/ relocation of rear hood locators. Fits 120" BBC only, not 112"



T-300

Length: 43"
Code: K117-005
Year: 1994 to 2009
Notes: Style with sealed beam headlights



W-900L

Length: 66"
Code: K117-001B
Year: 1994 and UP
Notes: CWS (Older), will NOT replace "plastic" OE hood application



W-900L, Plastic OE Replace

Length: 66"
Code: K117-001BP
Year: 1994 and UP
Material: Fiberglass
Notes: CWS (newer version), Plastic OE replacement, dual breather cutouts

GM



Topkick

Length: 42.25"
Code: G117-002
Year: 1995-2002
Notes: Confirm style. Older model (G117-001) also ran to '02



Topkick/Kodiak

Length: 37.5"
Code: G117-001
Year: 1990-2002
Notes: Confirm style. Newer model (G117-002) also ran to '02

INTERNATIONAL



4700/4900
Length: 44.5"
Code: I117-004A
Year: 1989 and UP



8100/4700LP/4900LP
Length: 39.75"
Code: I117-003
Year: 1989 and UP



8200/8300
Length: 54"
Code: I117-005
Year: 1989 to 2001



9200
Length: 59.5"
Code: I117-001A
Year: 97-99



9200i
Length: 54"
Code: I117-001B
Year: 99 and up
Notes: CWS



9400
Length: 65.5"
Code: I117-002A
Year: 1997 and UP
Notes: FWS



9400
Length: 70.5"
Code: I117-002B
Year: 1987 and UP
Notes: FWS



9400i
Length: 60"
Code: I117-002C
Year: 1999 and UP
Notes: CWS



9900i
Length: 67"
Codes: No cutouts: I117-007A
1 RH cutout: I117-007B
2 cutouts: I117-007C
Notes: CWS



2500
Length: 52.5"
Code: I117-006
Year: 1978 and up
Notes: Single RH Breather

OTHER



Arrow
Model: ARROW 490
Specialty Design or
International 4900
Length: 44.5"
Code: I117-004B
Year: 1989 and UP



Peterbilt 379 Extended, 3 Pc
Length: 64"
Code: P117-001
Notes: w/o grille, grille
priced separate



Ford F-series
Models: FORD F-600, 700, 800
Length: 39.5"
Codes: E117-001
Year: 1994 and 1999
Notes: Not including
grille (E104-001)



We manufacture high quality aftermarket bumpers for the best brands. These are manufactured using 100% pure, rigid, and flexible Fiberglass, as well as quality chrome steel.

VOLVO



VNL 3rd Generation

Material: 1 Piece, Fiberglass

Code: V105-003

Year: 2002 and UP




VNL 660, 610

Material: Fiberglass

Code: V105-001

Year: 1998 and UP

INTERNATIONAL

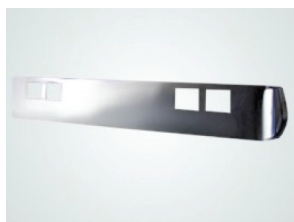

4900

Material: Chrome, Steel

Code: I105-003

Year: 89-02



9200/9400

Model: 9200, 9400, 9200i and 9400i

Material: 1 Piece, Chrome Steel

Code: Bumper only: I105-002
Bumper spoiler only: I105-004

Year: 1998 and UP



8100, Ends

Material: Fiberglass

Codes: LH: I105-105

RH: I105-205

Year: 1998 and UP



GUARDIAN

9400 IHC


Material: Chrome

Code: I105-001

Year: 1996 and Older

Notes: Flat bumper

FREIGHTLINER

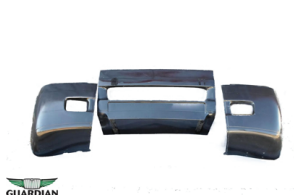

Century

Material: Fiberglass, 3 pc.

Codes: Complete: F105-002

Center: F105-302

LH: F105-102; RH: F105-202

Year: 1989 and UP



Columbia

Material: Steel Center, Fiberglass Ends

Codes: Complete: F105-003

Center: F105-303

LH: F105-103; RH: F105-203



M2, Ends

Material: Fiberglass, Ends only

Codes: Left: F105-104

Right: F105-204

Year: 1989 and UP



FLD-120,112

Fiberglass: F105-001A

Chrome: F105-001B

Year: 1989 and UP

KENWORTH



T-600, Fiberglass

Code: K105-003

Year: 1997 and UP

NO
PHOTO

T-600, Chrome

Code: K105-001E

Notes: Aero Type



T-800, 1 pc, Fiberglass

Code: K105-001A

Year: 1997 and UP



T-800, 1 pc, Chrome

Code: K105-001D

Year: 1997 and UP

Notes: Aero type

NO
PHOTO

T-800, 3 pc, '07 and under

Material: 2 fiberglass ends, 1 Alum center

Code: K105-001B: Plain

Center: K105-301B,

RH: K105-201B; LH: K105-101B;

K105-001C: Headlight holes

RH: K105-201C; LH: K105-101C

Year: '07 and Older

NO
PHOTO

T-800, 3 pc, '08 and up

Material: 2 fiberglass ends, 1 Aluminum center

Code: Complete: K105-005A

Center pc: K105-305A

RH piece: K105-205A

LH Piece: K105-105A

Notes: with Headlight Holes

Year: 2008 and up

NO
PHOTO

T-800, 3 pc, '12 and up

Material: 2 fiberglass ends, 1 Aluminum center

Code: Complete: K105-005B

RH piece: K105-205B

LH Piece: K105-105B

Notes: with Headlight Holes

Year: 2012 and up



T-300, 3 pc.

Material: 2 fiberglass ends, 1 Steel center

Code: Complete:

K105-004A

Center pc: K105-304A

RH piece: K105-204A

LH Piece: K105-104A

NO
PHOTO

T-660, 2 pc.

Material: Fiberglass

Code: LH: K105-206

RH: K105-106



T-2000, Older

Material: Fiberglass

Code: K105-002A

(1 pc, Bumper only!),

Lower air dam, LH: K105-102A,

RH: K105-202A

Year: 2004 and Older

Notes: Air dams on '05 and up

work only for 2 pc. dams

(not 3 pc. dams)

NO
PHOTO

T-2000, Newer

Material: Fiberglass

Code: K105-002B (1 pc, Bumper only!),

Lower air dam, LH: K105-102B,


Center: K105-302B, RH: K105-202B

Year: 2005 and newer

Notes: Air dams on '05 and up work only

for 2 pc. dams (not 3 pc. dams)

UNIVERSAL

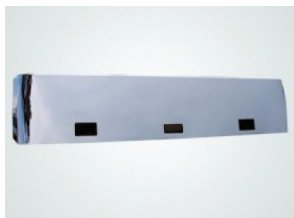

Chrome Steel

Brand: Universal bumper

Width: 21", 19", 16"

Code: 21": U105-001

19": U105-002; 16": U105-004

NO
PHOTO

KW/Pete/Int'l

Material: Chrome

Width: 16"


Code: U105-003

Notes: Rectangular, Step hole




Grilles Fabricated in Aluminium and Stainless Steel.


VOLVO

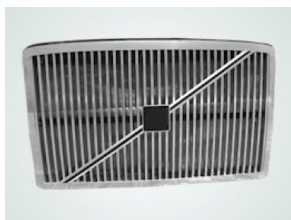


VNL, 2nd Gen
Material: Aluminum
Code: V104-001A
Year: 1986 and UP

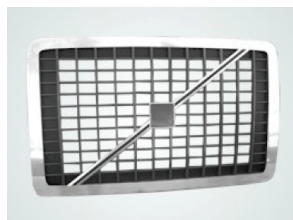

VNL, 3rd Gen
Material: Aluminum
Code: V104-001B
Year: 2002 and UP

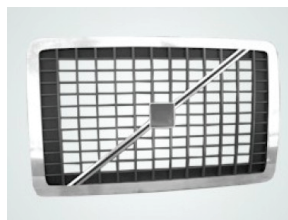


VNM, Complete
Material: Aluminum
Code: V104-001C

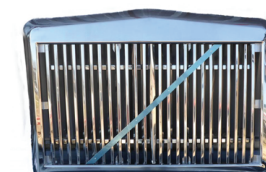

WIA
Material: Stainless Steel
Code: V104-002
Year: 1986 and UP


KENWORTH

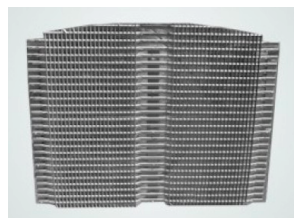


T-600
Model: T-600B, T-600
AERO (split grille)
Material: Aluminum
Painted
Code: K104-004
Year: 1990 and UP



W900L
Material: SURROUND:
Stainless steel;
GRILLE: Aluminum
Codes: Complete,
Surround and grille:
K104-001A
Grille only: K104-001B

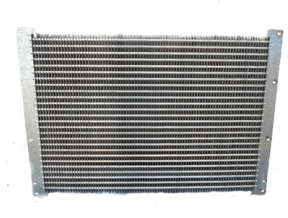

T800
Material: SURROUND:
Stainless steel
GRILLE: Aluminum
Code: Complete,
Surround and
grille: K104-002A
Grille only: K104-002B

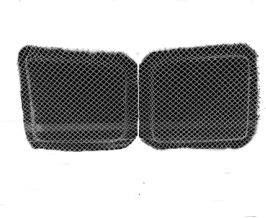

T2000
Material: Aluminum
Code: K104-003
Notes: Grille only



T300
Material: Aluminum
Code: K104-005
Notes: Grille only

FREIGHTLINER



Century

Material: Aluminum
Code: F104-003
Year: 1996 to 2005
(non-overlay)



FL Series

Model: FL50-90
Material: Aluminum
Code: F104-002
Year: 1991 and up



M2

Material: Aluminum
Code: F104-005
Notes: Not pre-drilled



FLD-112

Material: Aluminum
Code: F104-004
Year: 1989 and up



FLD-120

Material: Aluminum
Code: F104-001
Year: 1989 and UP

INTERNATIONAL



9200/9400

Model: 9200, 9400, 9200i, 9400i
Material: Ptd. Steel with
Alum. bars, w/ center notch
for emblem
Code: i104-001
Year: 1994 and UP



9200/9400, Older

Model: 9200, 9400
Material: Stainless Steel
Code: I104-002
Year: 1987 and UP

OTHER



Ford F-ser, F600 to F800

Material: Fiberglass
Code: E104-001
Year: 1994*-1999: F800 only,
works for all F-ser models
after 1994



Peterbilt 379 Extended

Material: Stainless Steel
Code: P104-001

NO
PHOTO



Fuel Tanks

INTERNATIONAL



9000 series, 99 and up
Length: 46", 55" & 70"
Diameter: 26"
Material: Aluminum
46" Code: Right: I197-202C
 Left: I197-102C
55" Code: Right: I197-202B
 Left: I197-102B
70" Code: Right: I197-202A
 Left: I197-102A
Year: 99 and up



9400 IHC, 98 and down
Length: 70"
Diameter: 26"
Material: Aluminum
Code: Right: I197-201
 Left: I197-101
Year: 98 and down



Prostar, 26" Diameter
69" Right: I197-203A
60" Right: 197-103B
45, L & R:
 Right: I197-203C
 Left: I197-103C
Material: Aluminum



4200/4300 4400
Dimensions: 16" x 25" x 36"
Material: Aluminum
Code: Right: I197-204A
 Left: I197-104A
Notes: D tank

KENWORTH



36" & 48"
Length: 36" and 48"
Diameter: 24"
Material: Aluminum
36" Code: Right: K197-201A
 Left: K197-101A
48" Code: Right: K197-201B
 Left: K197-101B



60" & 72"
Length: 60" and 72"
Diameter: 24"
Material: Aluminum
60" Code: Right: K197-201C
 Left: K197-101C
72" Code: Right: K197-201D
 Left: K197-101D
Year: Unknown



T600 Only
Length: 36" and 48"
Diameter: 24"
Material: Aluminum
36" Code: Right: K197-202A
 Left: K197-102A
48" Code: Right: K197-202B
 Left: K197-102B

FREIGHTLINER

NO
PHOTO

M2

Dimensions: 19"x19"x37"W

Material: Aluminum

Code: Left: F197-101A

Right: F197-201A

NO
PHOTO

Century/ Columbia

Lengths: 86", 82", 72", 60"

Diameter: 23"

Material: Aluminum

86" Code: Left: F197-102A | Right: F197-202A

82" Code: Left: F197-102B | Right: F197-202B

72" Code: Left: F197-102C | Right: F197-202C

60" Code: Left: F197-102D | Right: F197-202D

OTHER



VOLVO VNL

Length: 46, 55" & 68"

Diameter: 26"

Material: Aluminum

46" Code: Right: V197-201C

Left: V197-101C

55" Code: Right: V197-201B

Left: V197-101B

68" Code: Right: V197-201A

Left: V197-101A



Peterbilt

Length: 54", 60" & 65"

Diameter: 26"

Material: Aluminum

54" Code: P197-301C,

works for both sides

60" Code: Right: P197-201A

Left: P197-101A

65" Code: Right: P197-201B

Left: P197-101B



Fuel Tanks Covers / Side Fairings

KENWORTH



T-600 Aero, Center

Code: Right: K164-201AM31, 36, or 41

Left: K164-101AM31, 36, or 41

Notes: 31, 36, 41 signifies measurement hole to hole on fairing



T-600 Aero, Front

Code: Right: K164-201A and Left: K164-101A



T-600 Aero, Rear


Code: Right: K164-201AR and Left: K164-101AR



T-600 Non-Aero, Lower

Model: T-600 A, B, II, Non-Aero

Code: Right: K164-202L and Left: K164-102L

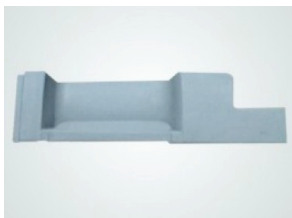

T-600 Non-Aero, Upper

Model: T-600 A, B, II, Non-Aero

Code: Right: K164-202U and Left: K164-102U



T-660, Front

Code: Right: K164-203; Left: K164-103

FREIGHTLINER



Columbia/Century, Front

Code: Right: F164-201 and Left: F164-101



Battery Box Covers

FREIGHTLINER



FLD/Classic

2 steps, 31"W x 16" Deep: F607-001B

2 steps, 24"W x 16" Deep: F607-002B

2 steps, 16"W x 24" Deep: F607-003B

Plain, 16"W x 24" Deep: F607-003A

Material: Aluminum



Columbia/Century

Plain, 31"W x 16" Deep: F607-001A

Plain, 24"W x 16" Deep: F607-002A

Plain, 31"W x 24" Deep: F607-004A

2 steps, 31"W x 24" Deep: F607-004B

Material: Aluminum



Fender Extensions

INTERNATIONAL

- 9400**
Code: I111-001
Year: 96 and older
Notes: Code includes L+R together
- 4700/4900 (non-LP)**
Code: I111-002
Year: 1990 to 2002
Notes: Code includes L+R together. NOT for lo pro. For lo pro: see I111-005
- 8300**
Code: I111-003
Notes: Code includes L+R together
- 9200 & 9400**
Code: I111-004
Year: 1997 and up
Notes: Code includes L+R together. For 9200/9200i, 9400/9400i
- 8100/4700LP/4900LP**
Code: I111-005
Year: 1990 to 2002
Notes: Code includes L+R together. Works on 4700/4900 Lo Pro's

FREIGHTLINER

- FLD120**
Code: F111-001
Notes: Code includes L+R together
- FL50-90 Ser**
Code: F111-002
Notes: Code includes L+R together
- Columbia/Century**
Code: F111-003
Notes: Code includes L+R together

KENWORTH

- T800B**
Code: K111-001
Notes: Code includes L+R together. Cut fenders/Curved windshield



Day Cab Conversion Kits

KENWORTH



Various Models

Model: T600, T800B, W900L

Code: K199-001

Year: ALL

Description: This is the Complete Conversion Kit including interior upholstery, glass, bracketry and exterior cover. Not inc rivets.



Fenders

PETERBILT

NO
PHOTO

379 Extended

Material: Fiberglass

Code: P110-201 and P110-101

Year: 1997 and up



Fuel Tank Steps

FREIGHTLINER



FLD, 71"

Material: Aluminum

Length: 71 "


Code: F199-001



FLD, Complete

Material: Aluminum

Code: F199-002

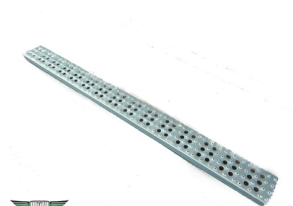


GUARDIAN

Columbia, 60"

Material: Aluminum

Code: F199-003

KENWORTH

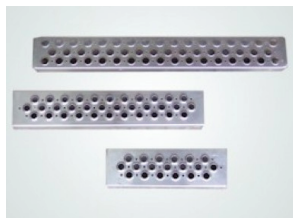

36", 48", 60"

Brand: Kenworth

Material: Aluminum

Lengths: 36 ", 48 ", 60 "

Code: 36": K199-002

48": K199-003

60": K199-004



Air Deflectors

KENWORTH

NO
PHOTO

T-800, T-600

Code: K166-001

Pieces: 5

NO
PHOTO

T800, T600, T660

Code: K166-002

Notes: Aerocab Sleeper,
62" length, 1 piece

OTHER

NO
PHOTO

Freightliner FLD-120

Code: F166-001


Notes: 4 piece

NO
PHOTO

International 9200, 9400

Code: I166-001

Pieces: 1

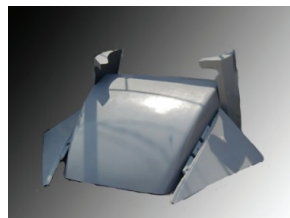

Volvo VNL

Code: V166-001

Pieces: 5



Fuel Tank Cover Steps


KENWORTH



T-600 Aero, Lower
Model: T-600 Aero
Lower, Front
Material: Aluminum
Code: K165-001C



T-600 Aero, Rear
Material: Aluminum
Code: K165-001D

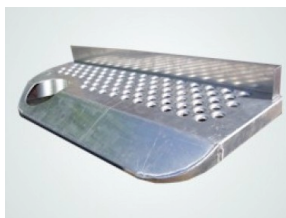

T-600 Aero, Upper
Code, without plug holes: Left: K165-101B
Code, with plug holes:
Right: K165-201A
and Left: 165-101A



T-600, Lower
Brand: Kenworth
Model: T-600; A, B, II,
Non-Aero
Material: Aluminum
Code: K165-002B



T-600, Upper
Brand: Kenworth
Model: T-600; A, B, II,
Non-Aero
Material: Aluminum
Code: Right: K165-202A
and Left: K165-102A



T-660, Front (Long)
Material: Aluminum
Code: Right: K165-203L
and Left: K165-103L



Kenworth T-660, Rear (Short)
Material: Aluminum
Code: Right: K165-203S
and Left: K165-103S



Luxury Steps

KENWORTH



T-800 & W-900, 34"

Material: Aluminum

Code:

One step: K198-004B

Two steps: K198-004A



T-800 & W-900, 40"

Length: 40"

Material: Aluminum

Code:

One step: K198-003

Two steps: K198-002



W-900, Mexico Version

Model: W-900, 45"

One step, and two step

Material: Aluminum

Code:

One Step:

RH: K198-201B

LH: K198-101B

Two Step:

RH: K198-201A

LH: K198-101A



Other



GUARDIAN

Crossmembers

International 8300:

I500-001

International 9200/9400,

Non "i": I500-002

International 9200i/9400i:

I500-003

Freightliner FLD-120:

F500-001

Freightliner Century, 6":

F500-002B

Freightliner Century, 41":

F500-002A

Freightliner Columbia:

F500-003



Mud Flap Brackets

Material: Chrome Steel

Code: U990-001A

Notes: 2 Pieces

(1 Right 1 Left),

Spring loaded



Mud Flap Brackets With Lights

Material: Chrome Steel

Code: U990-002

Notes: 2 Pieces

(1 Right 1 Left),

Spring loaded

NO
PHOTO

Drop Visors

Freightliner FLD120:

F164-001

Kenworth T600:

K164-001



Cab Roof



Kenworth (see notes for model)

Code: K166-001B

Notes: T300, T370, T600,

T800B, T600, CWS, for sleeper cabs



Mirrors

KENWORTH

T800B, T600, T660

Code: RH: K128-201, LH: K128-101

Notes: Electric, defrost,
black, complete

FREIGHTLINER

Cascadia

Code: RH: F128-201, LH: F128-101

Notes: Electric, defrost,
black, complete

INTERNATIONAL

9200i/9400i

Code: RH: I128-201, LH: I128-101

Notes: Electric, defrost,
black, complete



Signal Lights

KENWORTH

T600, T300

Code: RH: K145-201, LH: K145-101

Notes: Yellow

FREIGHTLINER

FLD-120

Code: RH: F145-201, LH: F145-101

Notes: Yellow

VOLVO

VNL, 96-03

Code: RH: V145-201, LH: V145-101

Notes: Yellow



Headlights

KENWORTH

T800, T600, W900L

Code: RH: K114-201,
LH: K114-101

Notes: Complete w/
chrome bezel and lights.
Also works for Freightliner
FLC and 379 Pete

T660

Code: RH: K114-202,
LH: K114-102

Notes: Not including bulb

FREIGHTLINER

FLD120

With Lights and Signal:

RH: F114-201

LH: F114-101

W/ lights, no bez or

signal: RH: F114-202

LH: F114-102

INTERNATIONAL

9200i/9400i

Code: RH: I114-201,
LH: I114-101

Notes: Complete w/
chrome bezel and signal



Headlights Bezels

KENWORTH

T800, T600, W900L

Code: Both sides:
K144-001

Notes: Bezel only. Also
works for Freightliner
FLC and 379 Pete

FREIGHTLINER

FLD-120

Code: RH: F144-201,
LH: F144-101

Notes: Chrome bezel only

Columbia

Code: RH: F144-202
LH: F144-102

Notes: Chrome bezel only



Product Warranty

Pricing: Prices subject to change without notice.

Ordering: A written or electronic order may be required when delivery or shipping is involved. Truckload orders can be sent to info@guardianheavyduty.com. Order forms are available through Guardian.

The customer is solely responsible for 1) proper vehicle/product identification, 2) complete and correct orders. Any requests for changes on orders may be declined, depending on timeliness and product availability.

Warranties: All goods are warranted to be free of defects of materials and workmanship when received. The length of this warranty is for 2 years, and is limited to and not to exceed cost of defective product.

Freight Policy: LTL shipments are F.O.B Hudson, CO 80642 unless other arrangements have been made with Guardian. Truckload shipments are F.O.B. Guardian's supplier(s) location.

Damaged Goods: Every effort is made to ensure your order is accurately and properly packaged. If, for any reason, there is anything missing or damaged, every effort should be made to contact a Guardian representative immediately.

It is the responsibility of the carrier to deliver the merchandise in good condition. If you receive an opened or damaged package/crate, inspect the contents before signing for them. If the item is damaged and you can repair it, write "DAMAGED", as well as any related notes, on the delivery sheet and sign for it, then call Guardian in either case. Do not reject the shipment, or you may incur fees by doing so. Inspect product thoroughly – all product signed for, without "damaged" marked on the bill of lading becomes the customers' responsibility. If damage is not noticed until merchandise is signed for and unpacked, notify Guardian immediately by phone. Guardian will likely require photos to be sent for each damaged product.

Guardian ultimately claims no responsibility for products damaged in transit.

Returned Goods: Guardian must be notified prior to a return. Customer must disclose condition and reason for return in order for Guardian to approve a return request. Returned goods will be subject to a restocking fee of 25%. Depending upon the condition of crating/packaging there may be a charge to repackage the goods. If the returned items have been improperly repackaged and damage has resulted, reduced or no credit may be given. Cost of return shipping is the responsibility of the customer. All returns are at the discretion of Guardian Heavy Duty, LLC. No returns will be considered after 14 days of the customer's original date of receipt.



Pre-install Instructions

1. Prior to painting your part, please test the fit of this part on your truck to ensure this is the correct one.
2. Wash the hood with a mixture of mild soap or dishwashing liquid and water using a soft sponge. Rinse with clear water. Use mineral spirits to remove surface stains.
3. Clean the surface using any solvent to remove mold release agents, wax, dirt, and other greasy agents.
4. Sand the hood surface lightly using 400-600 grit wet sand paper to ensure a good adherence of the primer and top coat.
5. Clean the hood with clear water, and then apply paint thinner to remove all dirt and grease from the surface.
6. Apply the fiberglass primer of your preference to the surface and cover the entire area. Make sure the primer is suggested for use with the top coat paint you plan to use.
7. If necessary, sand and clean again before painting.